

## EMV 110..9x7-M/K MOD X

### Actuators S9000 MOD X with modulating control signal with FBV 230C valves

#### MOD X - modulating control signal

Modulating control		0-10 V DC 4-20 mA
--------------------	--	----------------------

**EMV 110..9Fx7-M MOD X**  
with handle, Molex connection

**EMV 110..91x7-M MOD X**  
without handle, Molex connection

**EMV 110..9Fx7-K MOD X**  
with handle, cable connection

**EMV 110..91x7-K MOD X**  
without handle, cable connection

PN32, ΔP<3 bar  
+2..+110°C

Product designation: **EMV 110 ..** 9 X X 7 - X MOD X

<b>Series</b>	9000						
<b>Actuator type</b>	1=without manual control F=with manual control						
<b>Rotation time</b>	V=20s/90°, T=40s/90°, S=55s/90°, E=80s/90°, R=110s/90°						
<b>Voltage</b>	7=24 V AC, 50Hz with (0)2...10V modulating						
<b>Connection type</b>	M=Molex connection K=cable						

#### Installation position

Do not mount the actuator under pipes fittings and other valves due to possible leakage of water. The installation site has to be frost-proof. Protection of the device from chemicals, paints, detergents, solvents and their vapours and other environmental influences must be guaranteed.

**FOR INDOOR USE ONLY!**

#### Installation recommendation for valves

Direction of flow input

#### Installation of the pipe and valve

Ensure that the pipe ends are well treated and without scraps.

Do not put more than necessary sealing material on the pipe threads.

The connection pipes must be placed on the same axis and should be straight between them.

To avoid bending, the pipes must be substained.

Avoid any damage to the valve because problems with sealing can occur.

Ensure that the pipe is not screwed to the end of the thread.

#### Maximum screwing torque of the connecting pipes into valves

	DN 20	DN 25	DN 32
<b>Internal threads</b>	60 Nm	80 Nm	90 Nm
	Maximum thread/length for the pipe		
	max 15 mm	max 18 mm	max 18 mm
<b>External threads</b>	40 Nm	55 Nm	80 Nm
	40/60 Nm	60/80 Nm	
<b>Compression fittings</b>	Number of turns to tight with tool after tightening by hand		
	1/2-3/4	1/2-3/4	

#### Dimensions

**FBV 234C**  
female thread

**FBV 238C**  
male thread

ball type: LL with constant flow during ball rotation

**FBV 237C**  
union connections, male thread

**FBV 244C**  
compression fittings

Dimensions (mm)	DN 20	DN 25	DN 32			
H	104	107	113,5			
H1	94	97	103,5			
H2	40	43	52			
H3	72	75,5	89			
H4	401	42	-			
Ø	19	24	32			
Ø1 (EN 1254-2)	22	28	-			
Rp (EN 10226-1)	3/4"	1"	1 1/4"			
R (EN 10226-1)	3/4"	1"	1 1/4"			
G (ISO 228-1)	1"	1 1/4"	1 1/2"			
S	68	81	86			
S1	72	85	90			
S2	136	152	165			
S3	72	85	-			
Kvs (m³/h)	9,6	11,3	25			
<b>Weight (kg)</b>	M	K	M	K	M	K
F/F/F FBV 234C (kg)	0,70	0,76	0,90	0,96	1,19	1,25
M/M/M FBV 237C (kg)	1,00	1,06	1,46	1,52	2,00	2,06
M/M/M FBV 238C (kg)	0,71	0,76	0,98	1,04	1,32	1,38
C/C/C FBV 244C (kg)	0,78	0,84	0,99	1,05	-	-

Legend:  
**M** - Molex connection  
**K** - cable

English

Information



FIRST d.o.o

Koroška cesta 56, 3320 Velenje,  
Slovenia


tel: ++386 (0)3 898 35 00

fax: ++386 (0)3 898 35 35

info@first.si, http://www.first.si


**Assembly of the actuator on the valve**

Actuator can be installed only in one position. Easy and fast installation of actuator on the valve with single push-CLIP system.

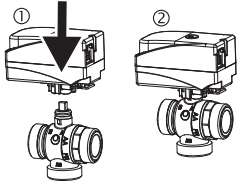


**Disassembly of the actuator from the valve**

First pull out the spring, then lift the actuator from the valve.

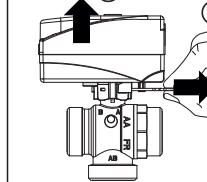

**Manual operation: Only for EMV110.. 9Fx7**


1. With screwdriver push the button down.
2. Turn the screwdriver for 90°.
3. Turn the handle of actuator for 90°.

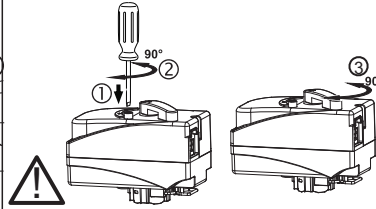

**Note:**  
When the operation button for manual operating is in MAN position, actuator stays in permanent position irrespective of control signal.

**Parameter setting using DIP switches**

DIP switches are located inside actuator. To open the actuator it is necessary to loosen the screws on the cover (1x), and remove handle.

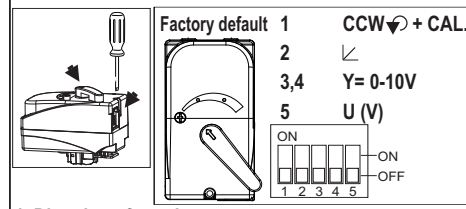

**1. Direction of rotation:**

- CCW ↺ / CW ↻ + calibration:
- CCW ↺ - Rotating A-AB
- CW ↻ - Rotating B-AB

DIP	CCW ↺	CW ↻
1	OFF	ON

During changing position of DIP1 is performed calibration proces. The actuator turns into left and right position. **During proces leave the button for manual control in position AUTO!**

**2. Control signal: direct/inverse**

DIP	↙	↘
2	OFF	ON

**3.4. Range settings**

DIP	0,16-9,84V 0-20mA	2-9,84V 4-20mA	0,16-4,88V	5,12-9,84V
3	OFF	OFF	ON	ON
4	OFF	ON	OFF	ON


**5. Y-Control signal U(V)/I(mA)**

DIP	U(V)	I(mA)
5	OFF	ON


**Position indication and flow direction**

**FACTORY DEFAULT: A-AB**


**Valve: Open A-AB**

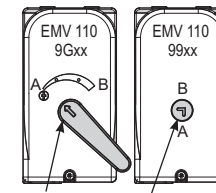




Handle position  
Mechanical indicator  
**Y=0 V**

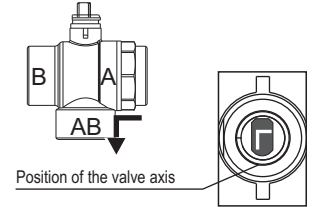

**Valve: Open B-AB**

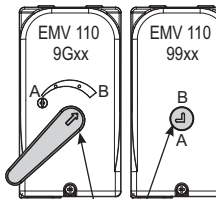


Handle position  
Mechanical indicator  
**Y=10 V**

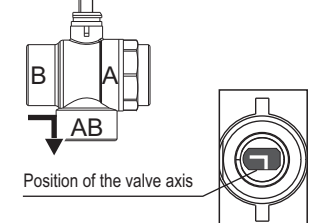


**Electrical connection**

**EMV 110..9xx7-K, Cable connection**

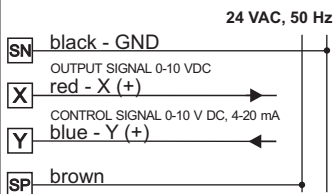

**EMV 110..9xx7-M, Molex connection**

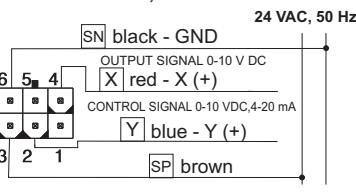

**Switch off power supply before making electrical connections or servicing to prevent electrical shock and equipment damage!**

**Technical data**

Supply voltage	24V AC, 50Hz
Running time	EMV 110 9xX7 (9xVx, 9xTx, 9xSx, 9xEx, 9xRx.) V=20s/90°, T=40s/90°, S=55s/90°, E=80s/90°, R=110s/90°
Power consumption	3,5 VA at 24 VAC
Torque	Max. 5 Nm
Protection class	II □
Degree of protection	Cable connection: IP44 Molex connection: IP40 (IP44 only with special connector-by special request)
Connection	EMV 110 9xx7-K: Cable l=1 m (4 x 0,5 mm <sup>2</sup> ) EMV 110 9xx7-M: Molex connection
Rotation direction	defined CW/CCW 90° (selectable by controller (DIP))
Manual control	with handle - EMV 110..9Fx7 only
Position indicator	mechanical indicator/handle on the cover
Ambient temperature	0°C...+55°C
Relative Humidity	0..80% r.H Non-condensing
Storage temperature	-10°...+70°
Maintaining	maintenance free

We reserve us the right to modify the technical instructions and product data without prior notice.

	FBV 234C	FBV 237C	FBV 238C	FBV 244C
Ball valve	F/F/F	M/M/M (U)	M/M/M	C/C/C
Pipe connection thread	female thread	union connection male thread	male thread	compression fittings
Fluid	water, glycol <50%, not aggressive fluids <b>The use is not allowed for flammable liquids, combustible gases or explosive liquids!</b> <b>Water quality as per VDI 2035.</b>			
Fluid temperature	+2°C...+110°C *with optional SCA adapter from -15°C to +125°C, briefly up to +150°C			
Nominal pressure	PN32, PN10 According to EN 13828:2003			
Max. differential pressure	3bar (recommended max. diff. pressure for low noise oper.: 2 bar)			
Approvals	ACS			
<b>Materials</b>				
Valve body	Brass, CW617N			
Ball	Brass, CW617N			
Seals	PTFE G502, EPDM Perox, FPM			

\* SCA adapter available on special request

**WARNING**

- The actuator must be protected by a fuse 1A.
- It is not allowed to open the actuator housing!
- The actuator must be electrically connected in accordance with technical norms.
- Observe the correct connection voltage!
- Installers, and users are responsible for the safe and proper installation / operation of the actuator.

**Safety information:**

- Before installation wash pipes, sealing material must not go inside the valve
- During installation, avoid soldering or welding near the valve
- Any deterioration or destruction of any part of the valves shall result in the need to replace the complete valve: alterations to any part of the complete valve shall result in the valve no longer being in compliance with the performance requirements of this document.
- Place of assembly must be protected against frost, the device must be protected from chemicals, paints, detergents, solvents and their vapors and other environmental influences (vibration).
- All installations should be performed in accordance with existing local installation regulations end codes of practice where they exist.
- It's imperative to follow the installation instructions of the valve manufacturer.
- If the valve is installed in the heating installation the water quality in the system has to comply with the VDI 2035 requirements.